


95 Cantiague Rock Road, Westbury NY 11590 Ph: 516.931.9090 Fax: 516.931.1254 info@crystorama.com www.crystorama.com





FIXTURE WIRE

CANOPY SCREWS

MOUNTING PLATE

OUTLET SCREWS

GROUND SCREWS

WOOD SCREWS

ANCHORS

WIRING NUTS

CANOPY

SWIVEL BALL

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 3 Candelabra bulbs 60 watts recommended (used LED bulbs for extended use)

HANGING ROD (36"=12"X3PCS)
HANGING ROD (3"=3"X1PC)

UPPER METAL CAP
GLASS SHADE
METAL BAND
FXING SCREWS(3PCS)
BULB (NOT INCLUDED)
FINIAL
Assembly Instructions: Note it is

DECORATIVE NUT

UPPER METAL CAP

LOWER METAL CAP

SOCKET CLUSTER


STEM SLEEVE

METAL BAND

GLASS SHADE

Assembly Instructions: Note it is strongly recommended that 2 people complete the assembly of this item.

- 1. Install the Metal Band onto the Glass Shade (rest the glass shade inside the foam block included in the packaging. Hold the metal band straight while another person secures it on the glass with the screws provided).
- 2. Unscrew the decorative nut.
- 3. Attached bulbs into the socket cluster.
- 4. Attached the lower metal cap and socket cluster into the glass shade
- 5. Attached the upper metal cap onto the glass shade and secure the decorative nut.

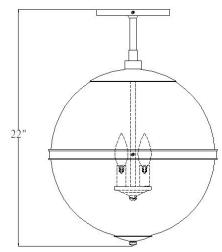



NOTICE: TO REPLACE THE BULB, PLEASE UNSCREW THE BOTTOM FINIAL FROM BOTTOM METAL CAP AS SHOWN ABOVE