

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS


ASSEMBLY INSTRUCTION MODEL #ARC-1900-SA-CL-MWP



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 3 Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
This Fixture is Dry rated.

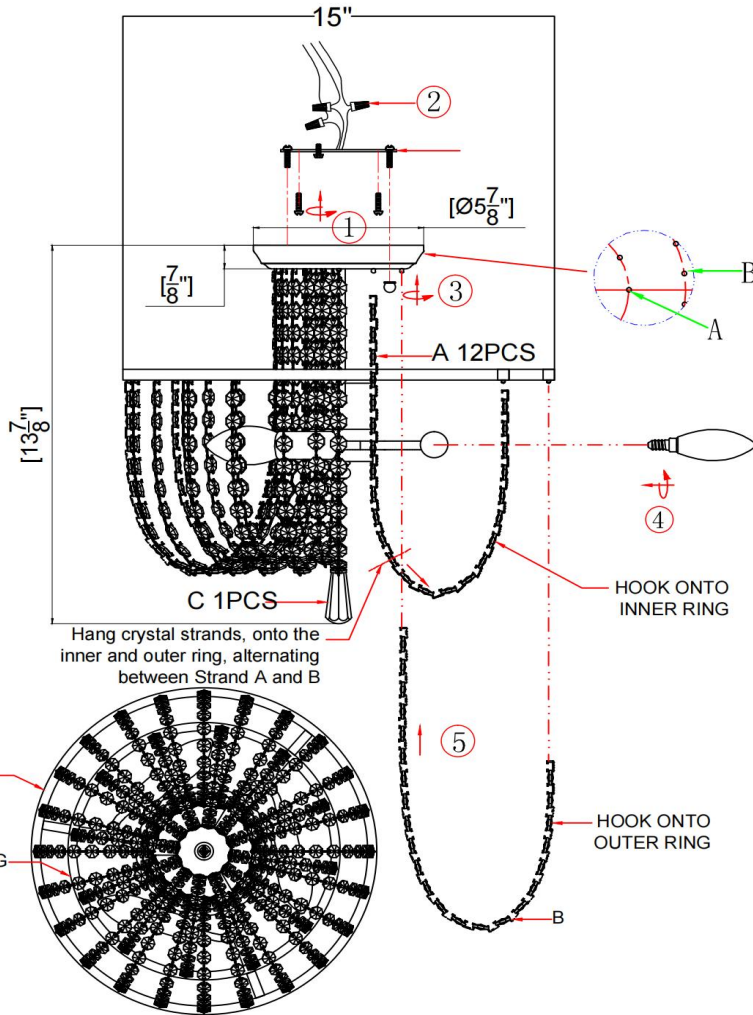

How to Install

- 1) Secure mounting bar to outlet box with outlet box screw.
- 2) Connect wires with wire connector.
- 3) After wires are connected, raise canopy and secure to mounting bar with ball nut.
- 4) Install light bulb (not included).
- 5) Hang crystal strands as illustrated in the diagram.

Crystal Sets

- A. 12sets 24*14mm
- B. 24sets 23*14mm
- C. 1set 2*14mm+1*76mm



WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

PART NUMBER MODEL #ARC-1900-SA-CL-MWP

Part Number

Part Numbers

- A.(1)-Mounting Hardware
- B.(1)-Canopy $\phi 5 \frac{7}{8}$ "
(XBN1900SACAN5.875IN)
- C.(2)-Ball nut(XBN1900SABANUT)
- D.(1)-Center Stem L3.6"
- E.(1)-Center Ring $\phi 15$ "
- F.(3)-Socket L2"
- G.(1)-Bottom Finial H1 $\frac{1}{5}$ "
(XBN1900SAFIN)

