


Assembly Instructions: 9903-18 (Autumn Twilight)

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

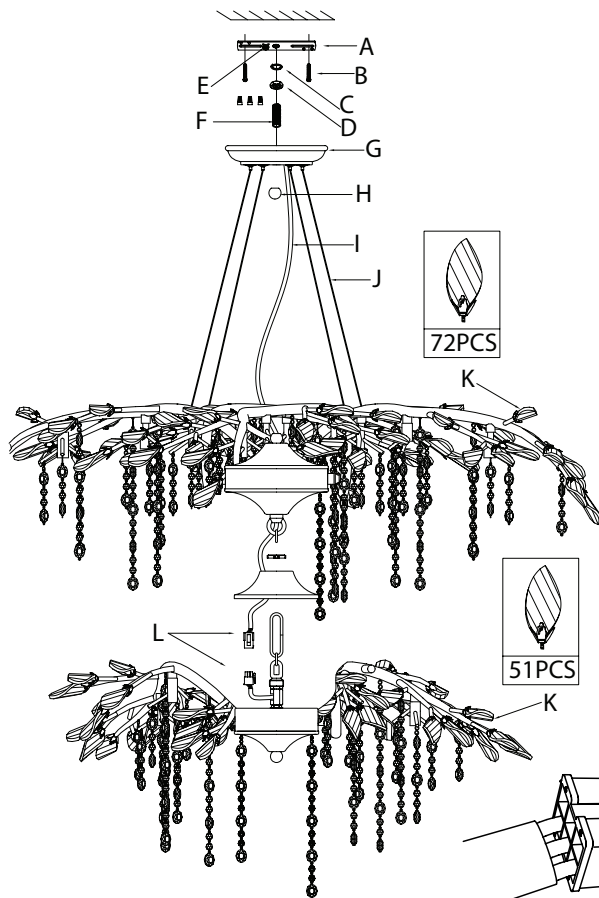

PREPARING FOR INSTALLATION


Carefully remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. From the parts bag remove the mounting strap assembly. One end of threaded nipple (F) should be attached to mounting strap (A) with washer (C) and hex nut (D) in place.
2. Pull the house wires through the center of mounting strap (A). Place mounting strap (A) over the junction box and secure in place with mounting screws (B) and a screwdriver. Tighten the screws securely.

ASSEMBLING THE FIXTURE

3. Connect top terminal block (L) and bottom terminal block (L) as shown on the diagram below. Connect top body and bottom body for chain. Measure to determine the correct length of cable wires needed for proper hanging height. To shorten the fixture, trim the wires to the desired length plus at least 8 to 10 inches. Put the fixture's wire through the hole in the side of canopy (G).

How to Identify the Fixture's Wires		
Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

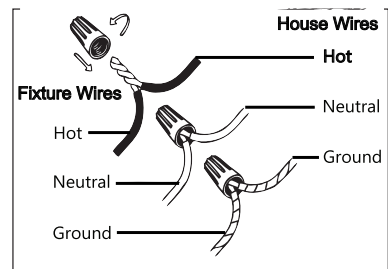

CONNECTING THE WIRES

4. Have an assistant support the fixture's weight while completing the wiring. Refer to the wiring diagram and attach the fixture's wires to the power supply wires from the junction box. Connect Hot to Hot (transparent wire with black inner thread, black, or smooth wire) Neutral to Neutral (transparent wire with white inner thread, white, or ribbed wire), and Ground to Ground (transparent wire with green inner thread, green wire, or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no house ground wire coming from the junction box, locate ground screw (E) on the mounting bracket/mounting strap and wrap the fixture's ground wire around the ground screw. Use a screwdriver to tighten the top of ground screw (E) onto the wires and into the mounting bracket/mounting strap. Tuck the wires into the junction box.

FINISHING THE INSTALLATION

5. Push canopy (G) up to the ceiling so that threaded nipple (F) protrudes through the hole in canopy (G). Secure canopy (G) to the ceiling by threading decorative nut (H) onto threaded nipple (F).
6. Install the crystals. To properly install crystals leaves (K), flip the page and refer to the attached crystal diagram.

Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS


Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture. Dry with a lint-free or microfiber cloth.







Assembly Instructions: 9903-18 (Autumn Twilight) - Cont.

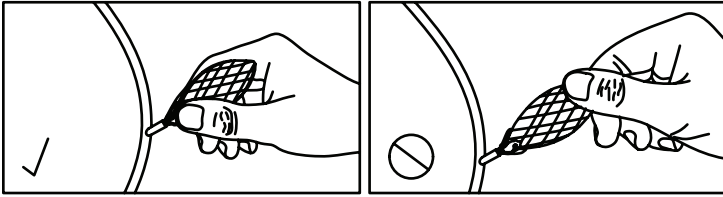
CRYSTAL DIAGRAM





Screw crystal leaves (K) onto the empty screw posts on the fixture body. Refer to the diagram below which demonstrates how to properly hold crystal leaves (K). The crystal beads are tied up in bags on the fixture body. Carefully tear open the bags and arrange the strings of beads.

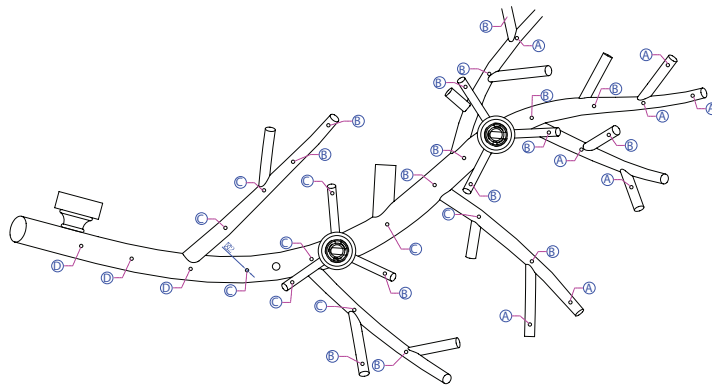

Hold the crystals carefully by the metal base to prevent the crystals from cracking or breaking.

<p>9903-18</p> <p>A-- PT-CRYSTAL-9903-2B</p> <p>B-- PT-CRYSTAL-9903-3B</p> <p>C-- PT-CRYSTAL-9903-4B</p> <p>D-- PT-CRYSTAL-9903-5B</p> <p>Each arm requires</p>	<p>A</p>  <p>X8</p>	<p>B</p>  <p>X16</p>	<p>C</p>  <p>X9</p>	<p>D</p>  <p>X3</p>
---	---	--	---	---



<p>9903-18</p> <p>A-- PT-CRYSTAL-9903-2B</p> <p>B-- PT-CRYSTAL-9903-3B</p> <p>C-- PT-CRYSTAL-9903-4B</p> <p>D-- PT-CRYSTAL-9903-5B</p> <p>Each arm requires</p>	<p>A</p>  <p>X11</p>	<p>B</p>  <p>X12</p>	<p>C</p>  <p>X10</p>	<p>D</p>  <p>X9</p>
---	--	--	--	---

