Complement your purchase

with these

fine accessories

also from

GINGER®:

**Towel Bars** 

Towel Rings

Toilet Tissue Holders

Hooks

Soap Dishes

**Tumbler Holders** 

Toiletry Shelves

**Grab Bars** 

Mirrors

Lights

**Bud Vases** 

**Hotel Shelves** 

Shower Curtain Rods

Soap & Bottle Baskets

Cabinet Hardware



2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.GINGERCO.COM


REV -

## KUBIC LIGHT

INSTALLATION INSTRUCTIONS

for 4681, 4681L Single Light



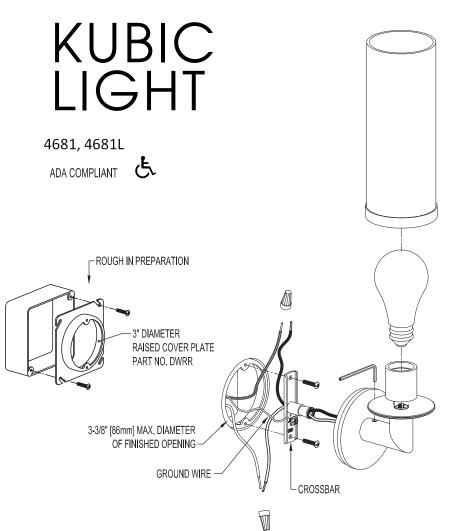

## **INSTALLATION INSTRUCTIONS:**

THESE LIGHTS SHOULD BE INSTALLED BY A LICENSED ELECTRICAL CONTRACTOR.

POWER REQUIREMENTS: 100-120 VOLTS

SAFETY: TO PREVENT ELECTRICAL SHOCK, BE SURE THAT THE POWER IS OFF BEFORE STARTING INSTALLATION.

## **NOTES TO INSTALLER:**

A. THE BACKPLATE OF THIS FIXTURE WILL COVER A HOLE WITH A MAXIMUM DIAMETER OF 3 3/8" (86 mm). THE CROSSBAR IS DESIGNED TO MOUND DIRECTLY ONTO A 3" DIAMETER ROUND RAISED COVER PLATE (ALSO CALLED A ROUND PLASTER RING OR A ROUND RAISED MUD RING.) THE COVER PLATE SHOULD NOT PROTRUDE FROM THE FINISHED WALL SURFACE.

B. THIS LIGHT MAY BE INSTALLED INVERTED IF PREFERRED.

## INSTALLATION:

- 1. INSTALL CROSSBAR ONTO RAISED COVER PLATE.
- 2. CONNECT THE HOUSE GROUND WIRE TO THE CROSSBAR WITH THE ATTACHED GREEN GROUND SCREW.
- 3. FEED THE LIGHT FIXTURE WIRES THROUGH THE SPINDLE ON THE CROSSBAR.
- 4. CONNECT THE WHITE WIRES OF THE FIXTURE TO THE HOUSE NEUTRAL (WHITE) WIRE WITH A WIRENUT.
- 5. CONNECT THE BLACK WIRES OF THE FIXTURE TO THE HOUSE HOT (BLACK) WIRE WITH A WIRENUT.
- 6. SLIDE THE FIXTURE OVER THE SPINDLE OF THE CROSSBAR UNTIL THE BACKPLATE IS FLUSH AGAINST THE WALL. TIGHTEN THE SETSCREW WITH THE PROVIDED WRENCH.
- 7. INSTALL LIGHT BULBS.

GINGER

8. SCREW SHADES ONTO THE FIXTURE. DO NOT OVERTIGHTEN.