
KITCHEN & BATH

Dual Towel Bar Installation

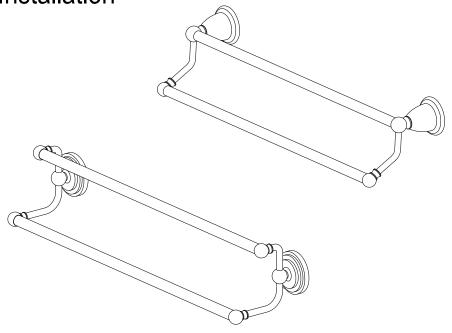


Parts:


Mounting Plate	Mounting Screw & Anchor	Slotted Set Screw
	(SUSTAIN)	
2 Pcs	4 Pcs	2 Pcs

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street, Chino, CA 91710

TOOLS REQUIRED Flathead Screwdriver Phillips Screwdriver Marking Pencil Hammer

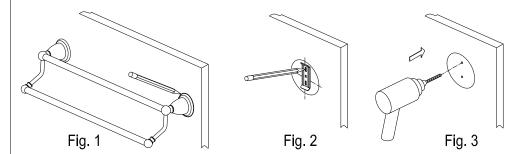

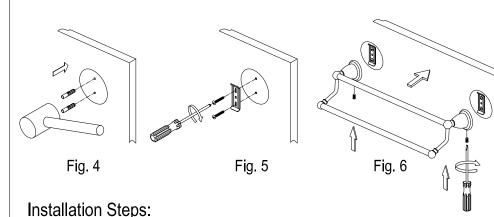

- Step 1. Locate where you would like to install the dual towel bar. Place a base onto the wall and trace around it with a pencil (fig 1).
- Step 2. Unscrew the slotted set screw of the base and remove the mounting plate.
- Step 3. Place the mounting plate in the center of the pencil outline you just made and mark the location of the mounting screws (fig 2). Drill holes at the marked locations(fig 3).
- Step 4. Insert anchors into the holes with a hammer until flush with the wall (fig 4).
- Step 5. Screw the mounting plate (with the lips facing out) to the wall with the mounting screws (fig 5).
- Step 6. Repeat steps 1 through 5 with the other side.
- Step 7. Place the unit, with the small hole in the base underneath, over the mounting plate by tightening the slotted set screws with a flat head screwdriver until the base is tightly fixed (fig 6).

Cleaning


Clean with a damp cloth only. Avoid using metal or abrasive polishes.

© 2019-10-L Kingston Brass

Power Drill

KITCHEN & BATH

Towel Ring Installation

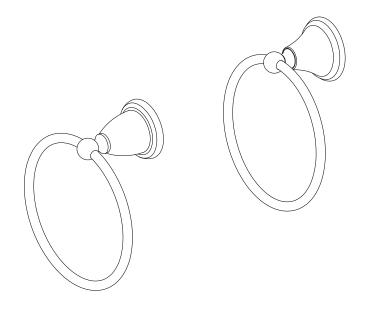


Parts:

Mounting Plate	Mounting Screw & Anchor	Slotted Set Screw
1 Pc	2 Pcs	1 Pc

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street. Chino. CA 91710

TOOLS REQUIRED

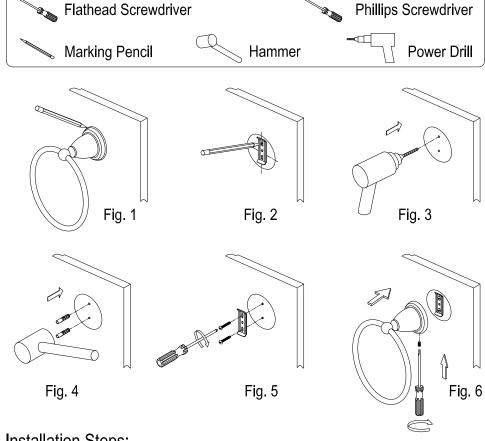

Installation Steps:

- Step 1. Locate where you would like to install the towel ring.

 Place a base onto the wall and trace around it with a pencil (fig 1).
- Step 2. Unscrew the slotted set screw of the base and remove the mounting plate.
- Step 3. Place the mounting plate in the center of the pencil outline you just made and mark the location of the mounting screws (fig 2). Drill holes at the marked locations (fig 3).
- Step 4. Insert anchors into the holes with a hammer until flush with the wall (fig 4).
- Step 5. Screw the mounting plate (with the lips facing out) to the wall with the mounting screws (fig 5).
- Step 6. Place the unit, with the small hole in the base underneath, over the mounting plate by tightening the slotted set screw with a flathead screwdriver until the base is tightly fixed (fig 6).


Cleaning


Clean with a damp cloth only. Avoid using metal or abrasive polishes.

© 2019-10-L Kingston Brass

KITCHEN & BATH

Robe Hook Installation

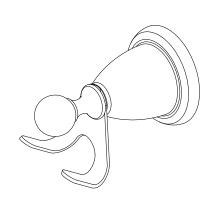

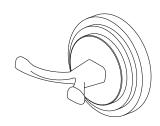


Parts:

Mounting Plate	Mounting Screw & Anchor	Slotted Set Screw
	CENTRAL OF THE PROPERTY OF THE	
1 Pc	2 Pcs	1 Pc

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street. Chino. CA 91710

TOOLS REQUIRED

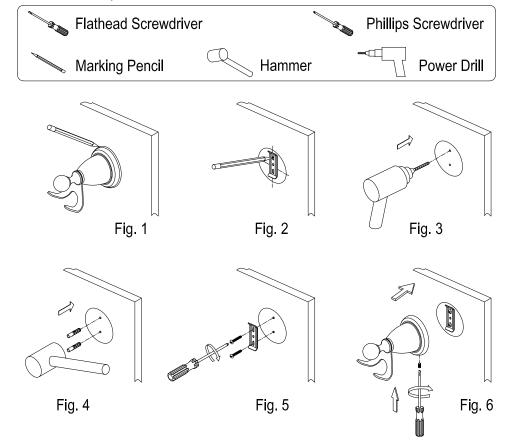

Installation Steps:

- Step 1. Locate where you would like to install the robe hook.

 Place a base onto the wall and trace around it with a pencil (fig 1).
- Step 2. Unscrew the slotted set screw of the base and remove the mounting plate.
- Step 3. Place the mounting plate in the center of the pencil outline you just made and mark the location of the mounting screws (fig 2). Drill holes at the marked locations (fig 3).
- Step 4. Insert anchors into the holes with a hammer until flush with the wall (fig 4).
- Step 5. Screw the mounting plate (with the lips facing out) to the wall with the mounting screws (fig 5).
- Step 6. Place the unit, with the small hole in the base underneath, over the mounting plate by tightening the slotted set screw with a flathead screwdriver until the base is tightly fixed (fig 6).


Cleaning

Clean with a damp cloth only. Avoid using metal or abrasive polishes.

© 2019-10-L Kingston Brass

KITCHEN & BATH

Toilet Paper Holder Installation

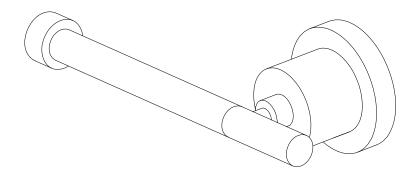


Parts:

Mounting Plate	Mounting Screw & Anchor	Slotted Set Screw
1 Pc	2 Pcs	1 Pc

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street. Chino. CA 91710

TOOLS REQUIRED

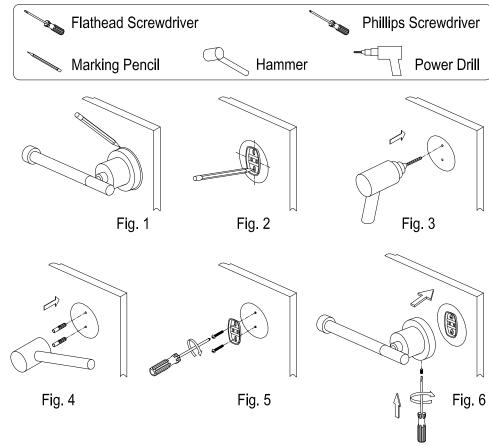

Installation Steps:

- Step 1. Locate where you would like to install the toilet paper holder.

 Place a base onto the wall and trace around it with a pencil (fig 1).
- Step 2. Unscrew the slotted set screw of the base and remove the mounting plate.
- Step 3. Place the mounting plate in the center of the pencil outline you just made and mark the location of the mounting screws (fig 2). Drill holes at the marked locations (fig 3).
- Step 4. Insert anchors into the holes with a hammer until flush with the wall (fig 4).
- Step 5. Screw the mounting plate (with the lips facing out) to the wall with the mounting screws (fig 5).
- Step 6. Place the unit, with the small hole in the base underneath, over the mounting plate by tightening the slotted set screws with a flat head screwdriver until the base is tightly fixed (fig 6).

Cleaning

Clean with a damp cloth only. Avoid using metal or abrasive polishes.

© 2019-10-L Kingston Brass